



Your New Landline Awaits!

Self-Install Instructions

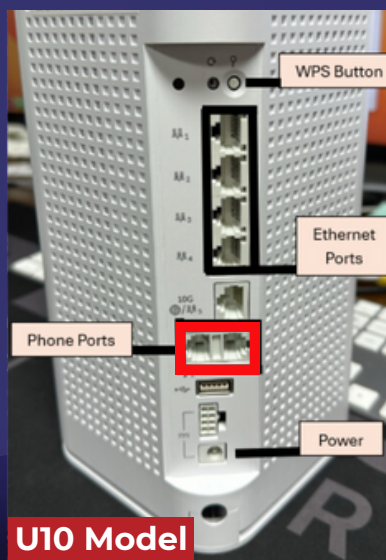

1. Locate the **phone port** on the back of the Internet box.

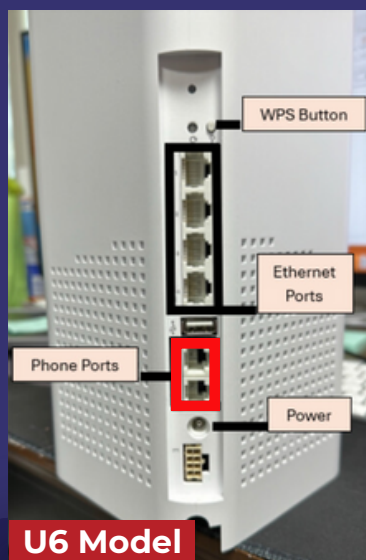

2. Plug your main phone **handset** into the phone port.

You will have a dial tone but will not be able to make and receive calls until the activation.



3. When your phone is ready to transfer over to us, we will **activate** the line.

You can specify what time you would like this done in the Phone Transfer Request Form.

If you have any questions, please contact our Voice Team directly at 833-457-5469.